





Fabric Frame Display Stand - Assembly Instructions

STEP 1 - Assemble the aluminum frame. Start by connecting all the corner profiles together using provided hardware.

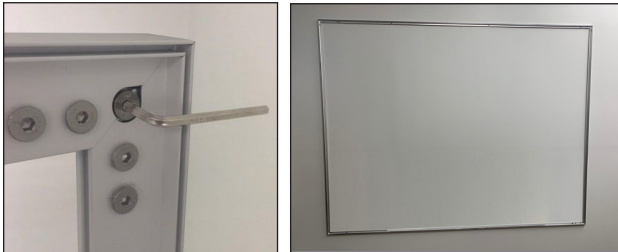

STEP 2 - **(Only If Applicable)* Insert the support profile into the center of the frame. Loosen both locks on the support. Insert the support profile into the interior groove of the frame. Once in place, tighten both locks with allen wrench.

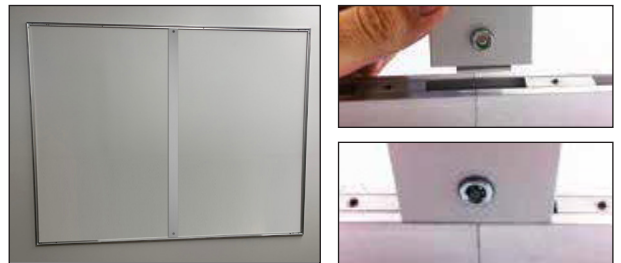

STEP 3 - Next, attach both feet to the bottom of the frame.



STEP 4 - Now insert fabric graphic gasket into one corner of the frame.



STEP 5 - Repeat the same process in the opposite diagonal corner.



STEP 6 - Finish installing the fabric gasket in the remaining corners.





Fabric Frame Display Stand - Assembly Instructions (continued)

STEP 7 - Starting at the midpoint of each side of the frame, tuck in the fabric going out towards each corner. Make sure the entire gasket is inserted into the frame groove.



STEP 8 - Repeat steps 4-7 for the second graphic to go on the other side.



STEP 9 - Stand the display up on its feet and you're finished!

